

Fig. 1(a)

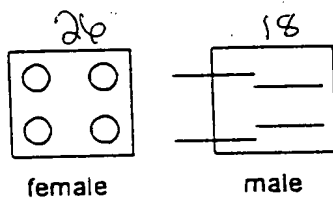
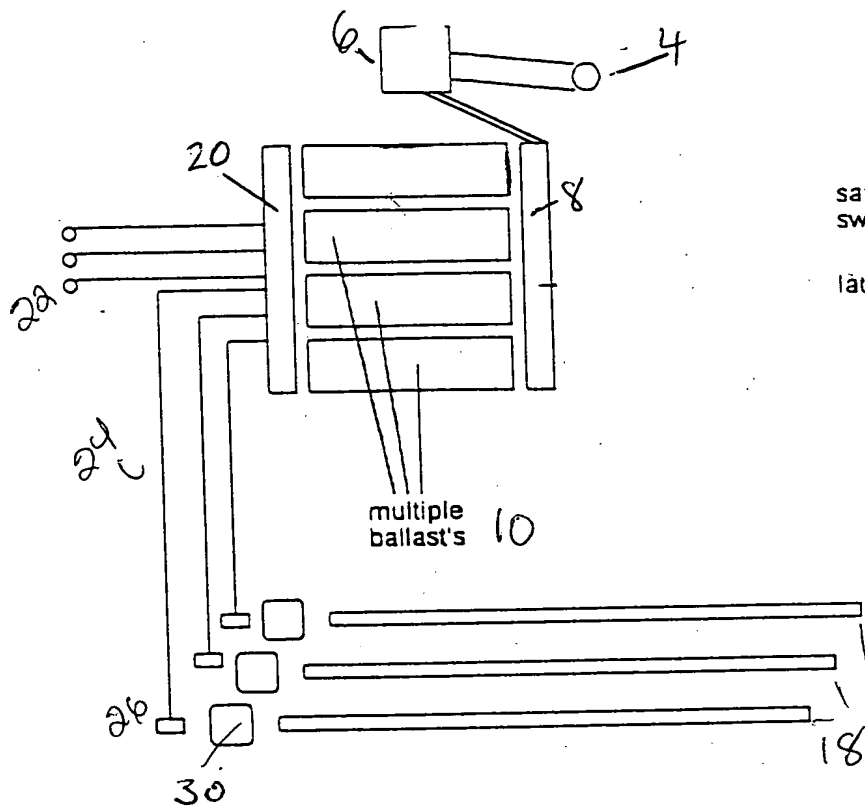


Fig. 1(c)

Fig. 1(b)

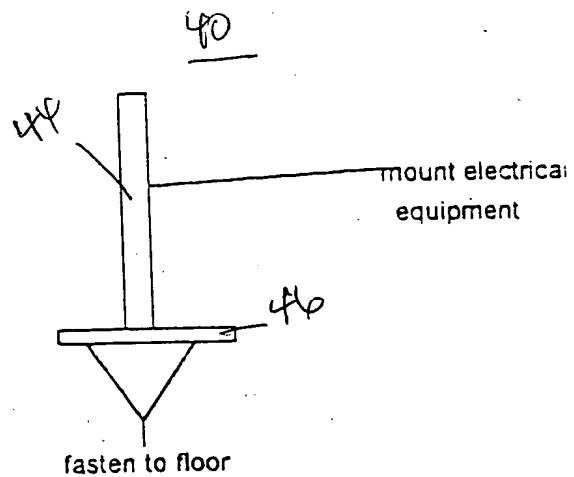
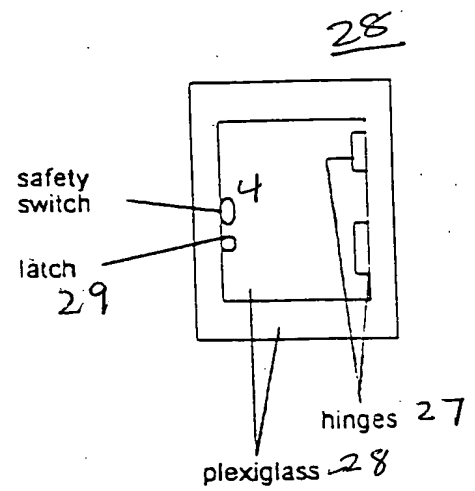


Fig. 1(d)

Figure 1


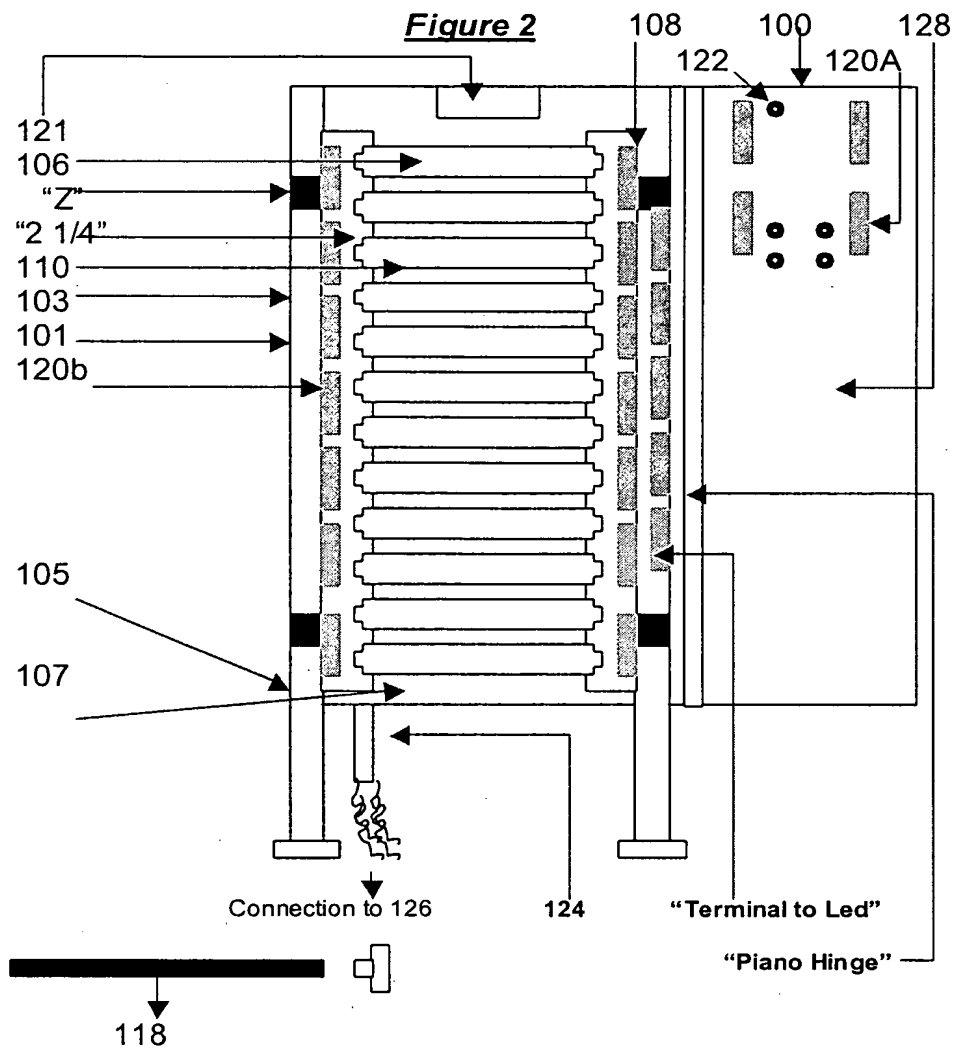


Figure 2(a)


Typical commercial installation

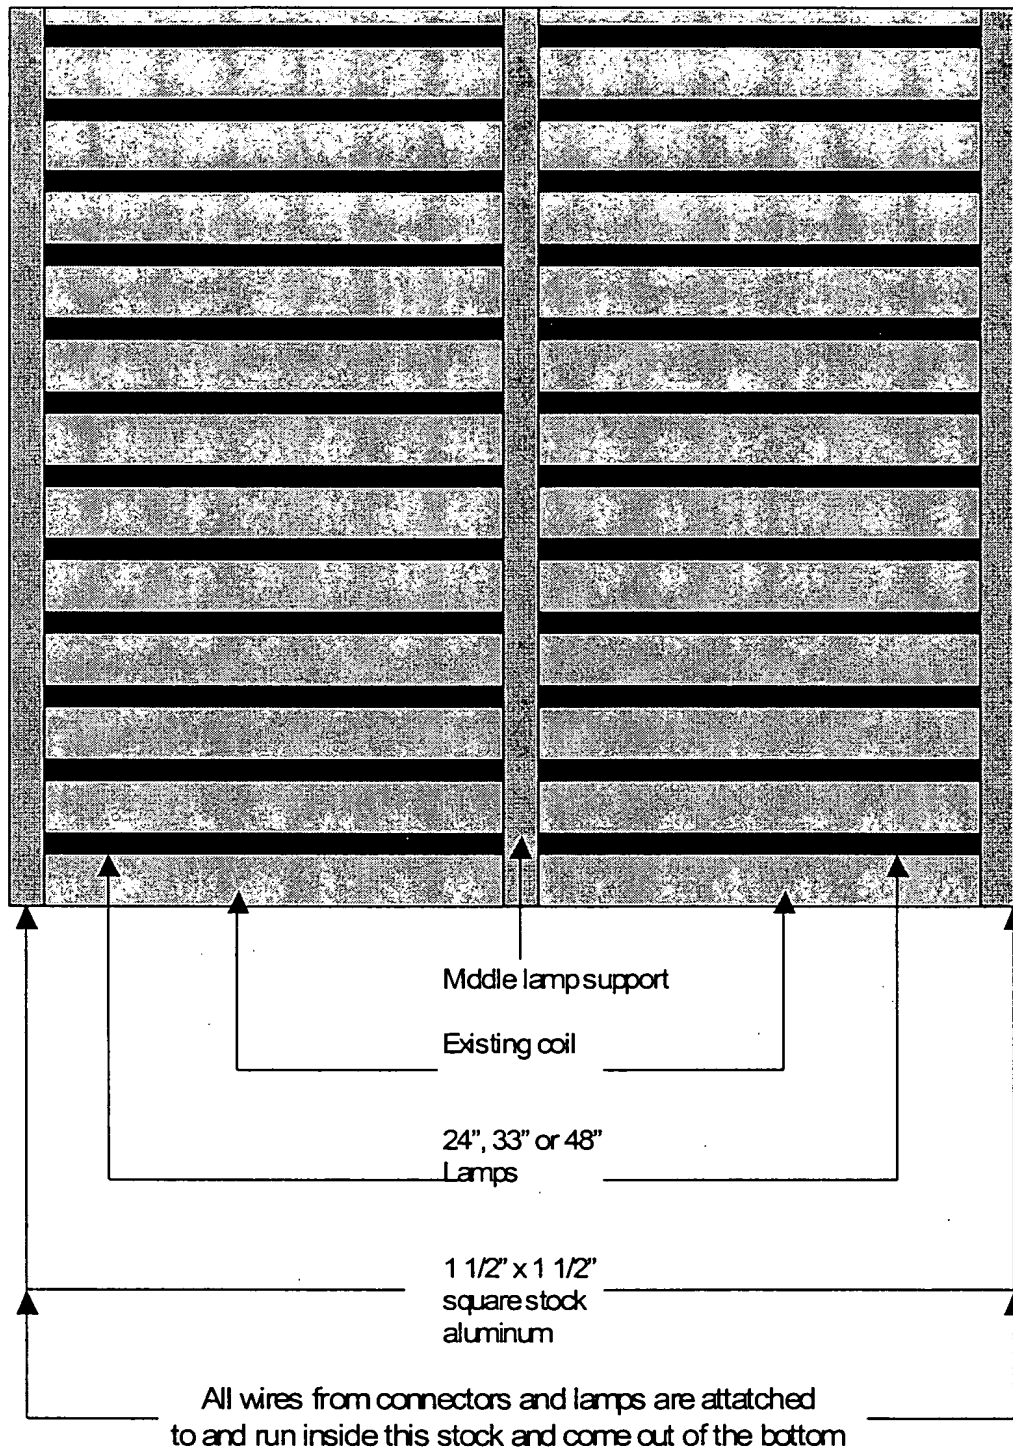

Since ducts or air handlers vary so much in size the lamp sizes may be mixed in order to fill the engineering specifications and since they may not fit end to end as pictured, they can be staggered.

Figure 2(b)

Typical Residential Lamp in duct placement

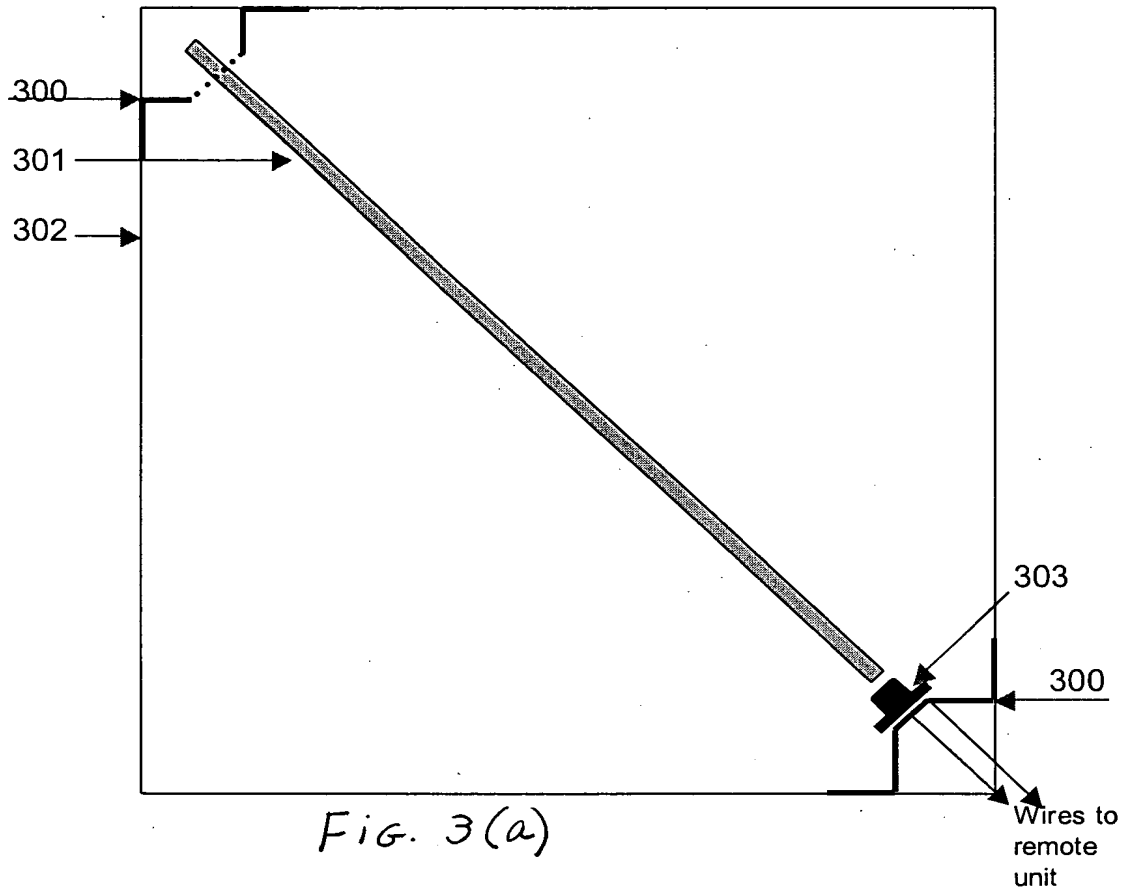

300 Closeup

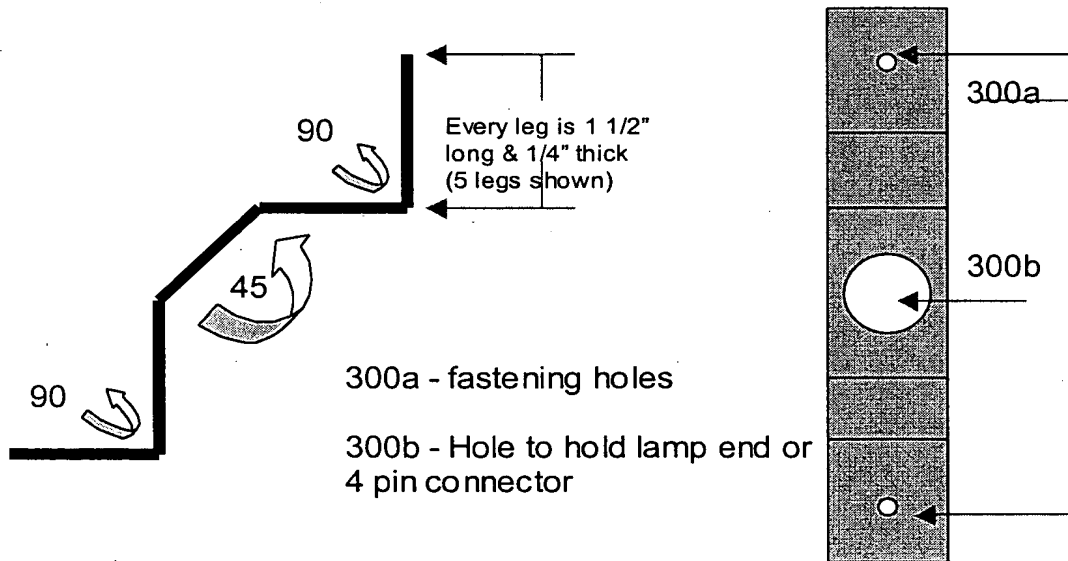


Fig. 3(b)

Figure 3

Figure 4
Residential

Figure 4a

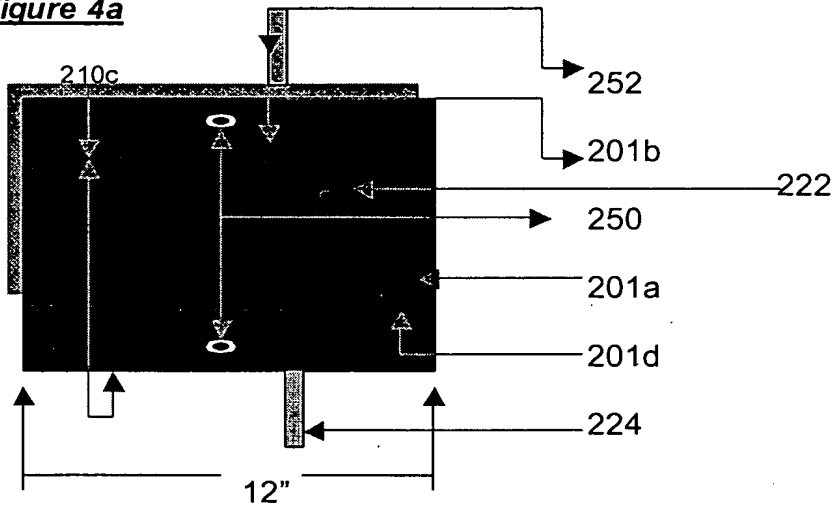
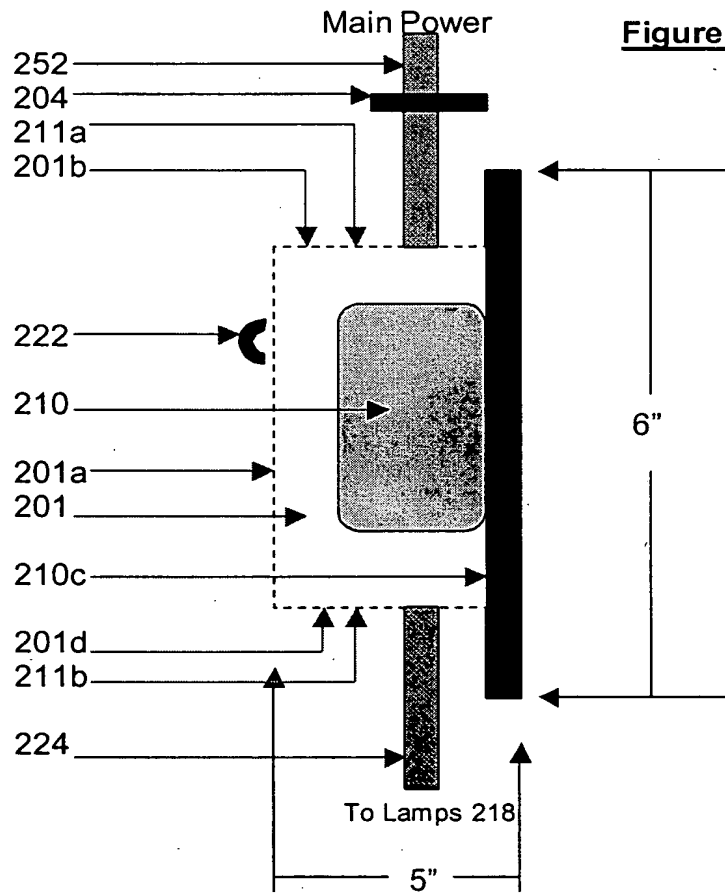


Figure 4b



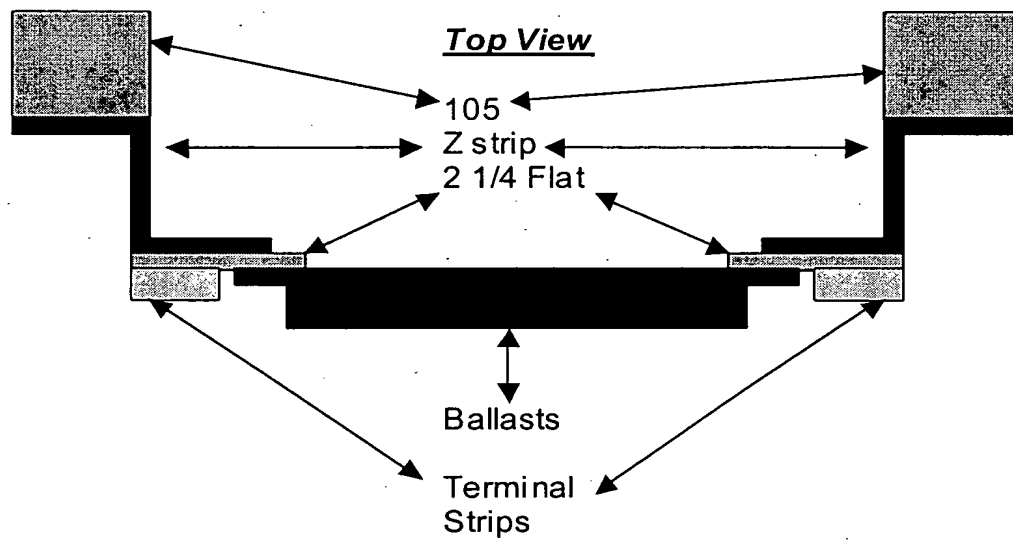


Figure 5

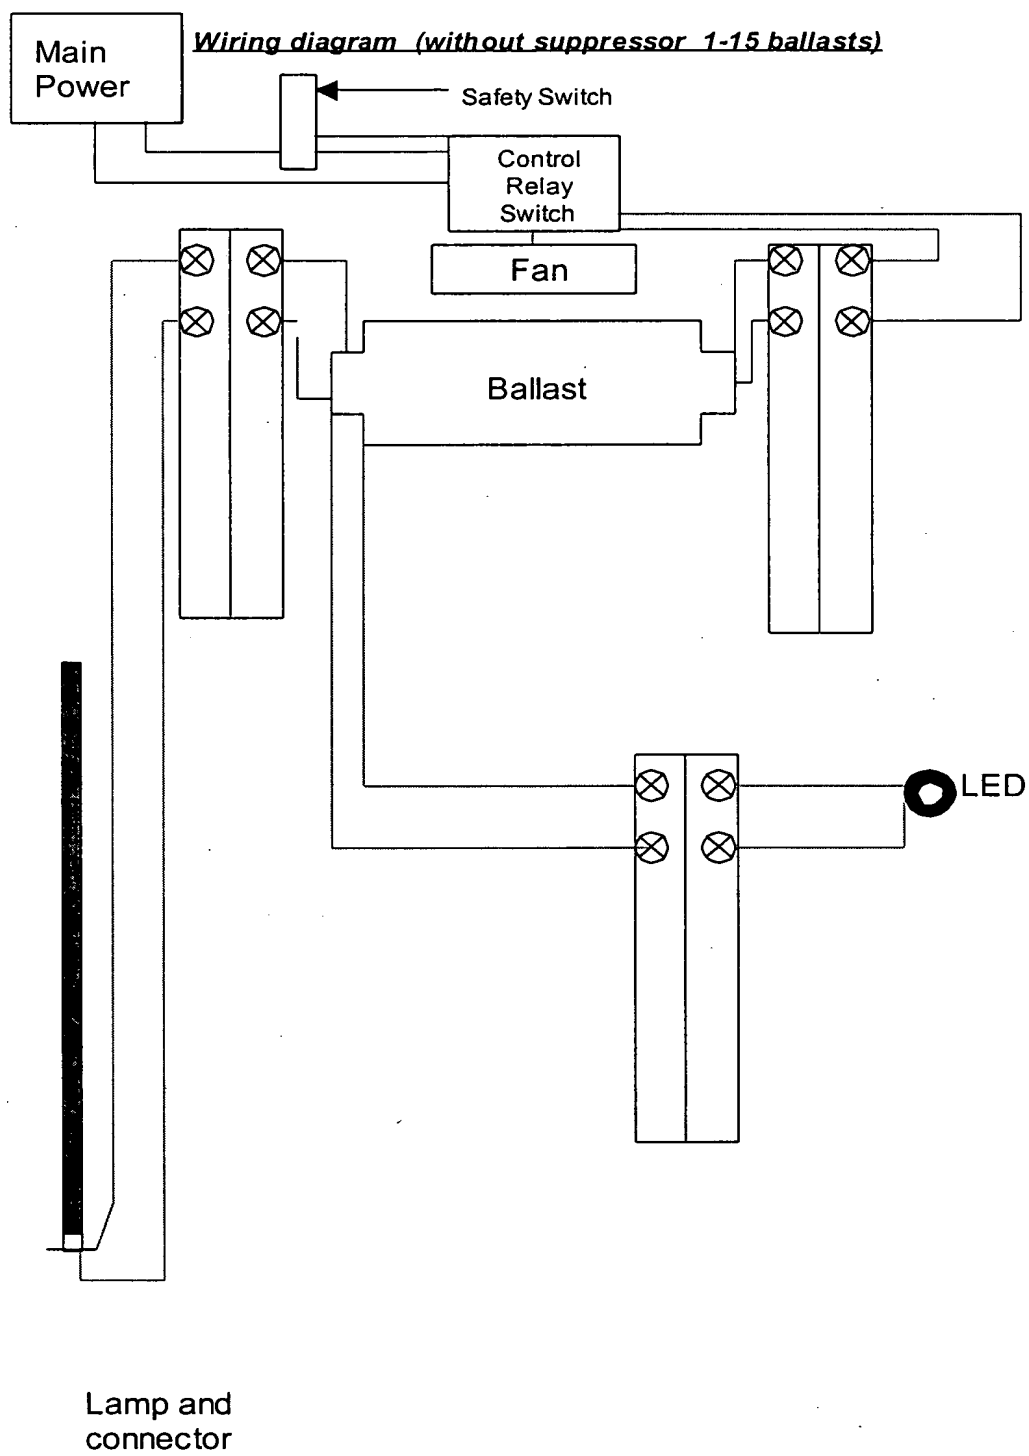


Figure 6

Wiring diagram
With suppressor = 16-30 ballasts

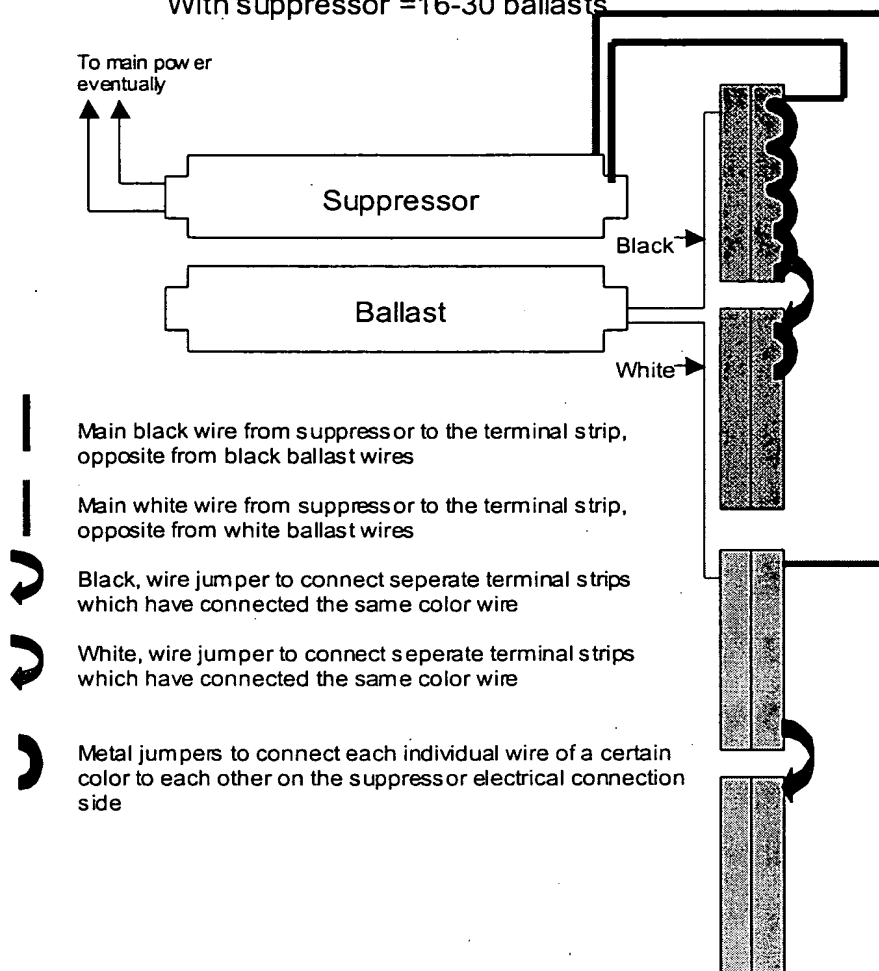


Figure 7